

How to update CELite-50 Firmware.

Items needed to update firmware:

- Windows Driver:
 - Download from here: <https://www.graphtecamerica.com/cp-download-ce-lite-50>
 - Windows Driver Installation Instructions: <https://www.graphtecamerica.com/cp-faq-video-window-driver-installation>
- Firmware files:
 - Download from here: <https://www.graphtecamerica.com/cp-download-ce-lite-50>
- How to install firmware:
 - Watch instructional video: <https://www.youtube.com/watch?v=SmZqdNpynWU>

